


WOODWORKER'S JOURNAL

America's leading woodworking authority™

Tenon Detail

(Front View)

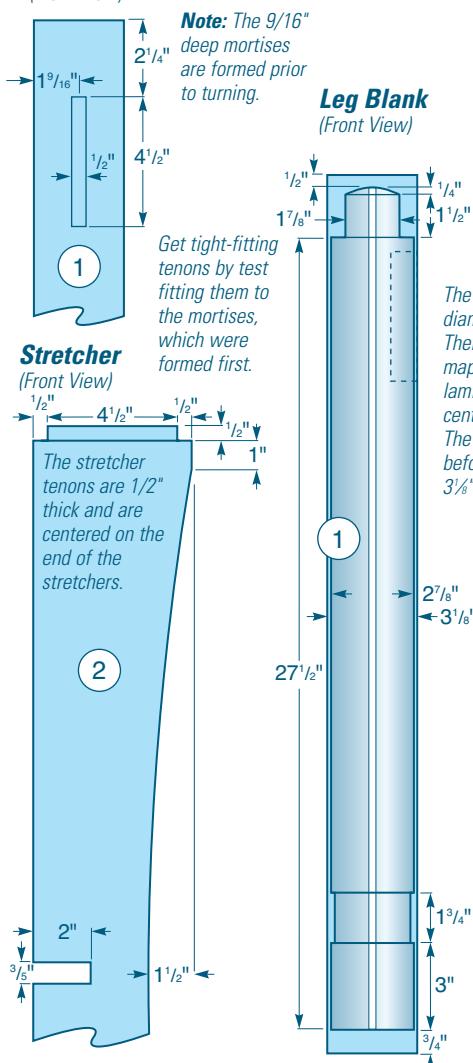

Stretcher

(Front View)

The stretcher tenons are 1/2" thick and are centered on the end of the stretchers.


(2)

Note: The other stretcher has a notch cut on the opposing edge to form a half-lap joint as shown in the exploded view.

Tabletop

(Top View)


(3)

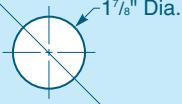

The location of the leg holes on the tabletop is best determined by marking an X from corner to corner on the bottom of the squared up tabletop blank. Place the clamped-together leg subassembly (with the clipped nails) onto the blank (tenons down), locate the tenon ends on the marked X and transfer the leg positions by gently tapping the bottom of the legs with a mallet.

(3)

Exploded View

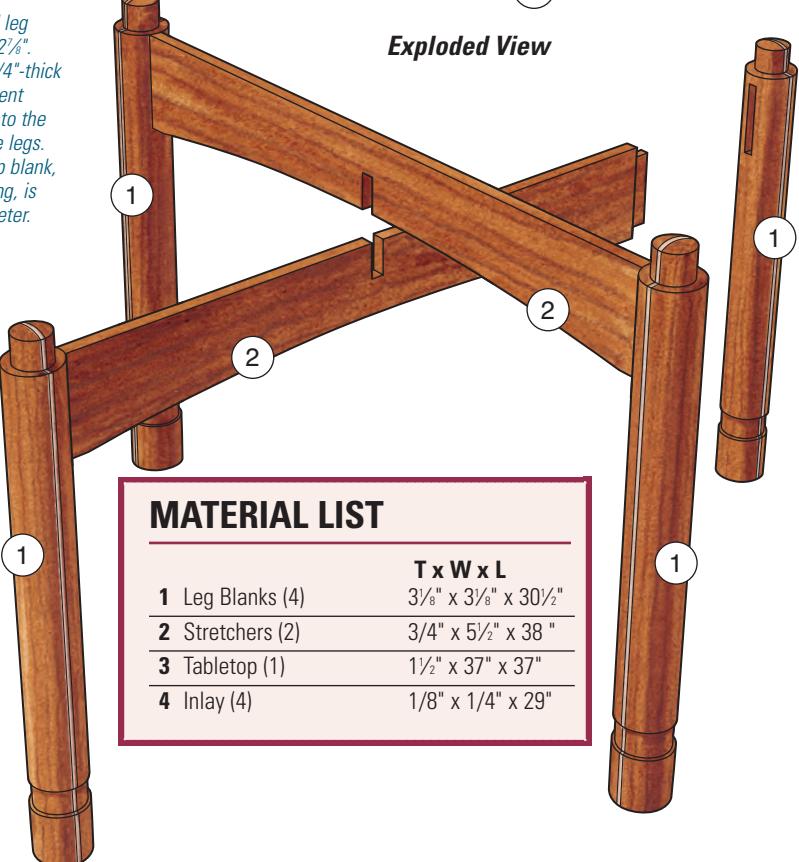

MATERIAL LIST

	T x W x L
1 Leg Blanks (4)	3 1/8" x 3 1/8" x 30 1/2"
2 Stretchers (2)	3/4" x 5 1/2" x 38"
3 Tabletop (1)	1 1/2" x 37" x 37"
4 Inlay (4)	1/8" x 1/4" x 29"